


Lathe Lifter Wheel Kit Instructions

1. Insert the spacers into the wheels to suit the width of the stand foot on your lathe.

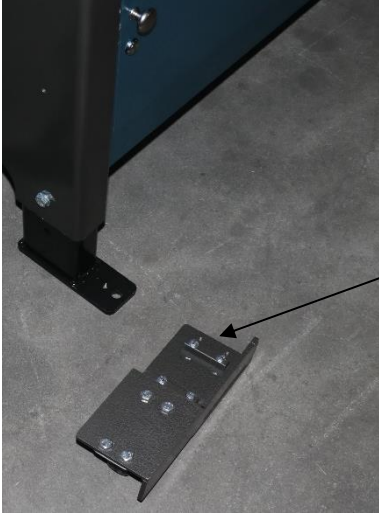

2. Insert the lifter under the stand so that the pivoting plate rests against the bottom of the tray. You may need to adjust the height of the lifter arm. To do this do you simply adjust the bolt hole position.



3. Press down on the lifting arm so that the stand lifts into the air and place on the two fixed wheel feet.





4. Lower the lathe by lifting the arm.



5. Repeat above steps 2 – 5 for the other side of the stand this time using the two pivoting wheels.



6. The lathe is now ready to move.

